




USER MANUAL

KoolMore Patty Press

Model: CHM-4, CHM-5, CHM-6

PATTY PRESS

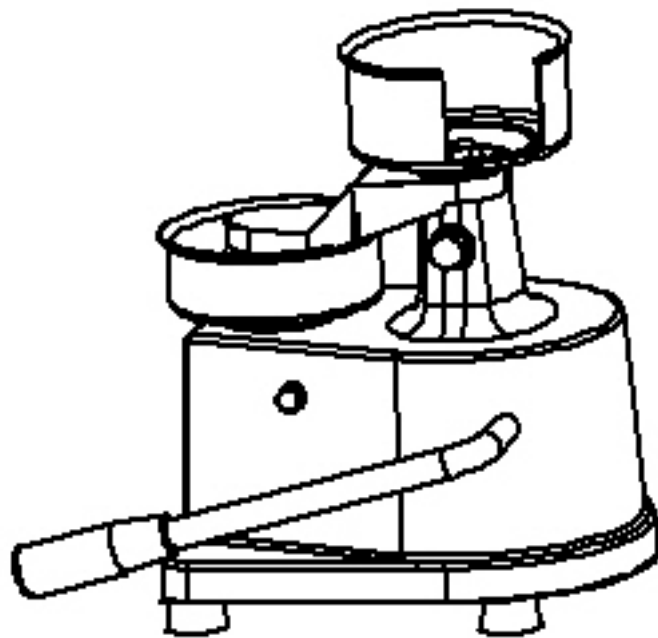

Before using, please read the operating instructions carefully to ensure proper application and achieve satisfactory results.

For any service-related issues, please contact us:



718-576-6342



support@koolmore.com

Operation

SAFETY INSTRUCTIONS

This manual contains a number of precautions to follow in order to help promote safe use of this equipment.

- To prevent illness caused by the spread of food-borne pathogens, it is important to properly clean and sanitize the patty press as any surface of the press can become contaminated.
- It is the responsibility of the patty press owner/operator to follow all guidelines, instructions and laws as established by your local and state health departments and the manufacturers of chemical sanitizers.
- ALWAYS properly clean and sanitize the patty press after use and as instructed by state and local laws.
- DO NOT disassemble the patty press beyond what is instructed. Only trained and qualified service personnel should attempt repairs.
- DO NOT drop the patty press.
- NEVER immerse the entire patty press base in water.
- DO NOT put any part of the patty press or the base in a dishwasher.

INSTALLATION INSTRUCTIONS

- Install the machine onto a solid, stable, non-slip surface. This area should be large enough to allow easy access cleaning.
- Put the cellophane discs into the holder at the top of the machine.

USE

- Put one cellophane disc into the holder.
- Then place a small quantity of minced meat, according to the thickness required
- Place another cellophane disc on the meat.
- Pull the lever down to form the hamburger.
- Lift the lever, which will lift the hamburger for easy removal.

CLEANING

- Carefully clean the machine with damp cloth and then wipe off with a dry cloth.
- NEVER place the patty press base in the sink or dishwasher.
- DO NOT spray the patty press with a hose or pressure washer.
- NEVER use a scrub pad, steel wool, or any abrasive materials on the press.
- ALWAYS follow cleaning instructions of your sanitizer or cleaning solution.
- Parts MUST be dry before reassembling and using the patty presses



WARRANTY

LIMITED WARRANTY

Koolmore Supply, Inc. extends a limited warranty to the original purchaser, guaranteeing that this Koolmore product is free from manufacturing defects in material or workmanship for one year from the date of purchase.

Should you discover any such defect within the warranty period, Koolmore Supply, Inc., reserves the right to repair or replace the product without charge, or to cover the cost of replacement parts and repair labor needed to correct defects present at the time of purchase or resulting from regular usage, when the appliance has been installed, operated, and maintained as per the instructions provided.

At its sole discretion, Koolmore Supply Inc. may decide to replace the product. In such an event, your replacement appliance will carry the warranty for the remaining term of the original unit's warranty period.

This warranty is valid exclusively to the original purchaser of the product and only applicable within the United States. The warranty commences from the date of original consumer purchase. Proof of the original purchase date will be required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy will be product repair, as outlined above. All services must be provided by a Koolmore-designated service company.

To claim warranty or request repair service:

Email support@koolmore.com. Please include your name, address, phone number, warranty repair request, and a copy of your proof of purchase receipt. Alternatively, visit koolmore.com and use the contact us page. A Koolmore customer service representative will promptly arrange service for your appliance.

We thank you for choosing Koolmore.

WARRANTY EXCLUSIONS

This limited warranty will not cover:

1. Failure of the product to perform during power failures or interruptions, or due to inadequate electrical service.
2. Damage incurred during transportation or handling.
3. Damage caused by accidents, vermin, lightning, winds, fire, floods, or acts of God.
4. Damage resulting from accidents, alterations, misuse, abuse, improper installation, repair, or maintenance. This includes using any external device that alters or converts the voltage or frequency of electricity.
5. Unauthorized product modifications, repairs by unauthorized centers, or use of non-approved replacement parts.
6. Abnormal cleaning and maintenance not aligned with the user's manual.
7. Use of incompatible accessories or components.
8. Any costs associated with repairs or replacements under these excluded circumstances shall be the responsibility of the consumer.

KoolMore