

BAGEL BAKERY DISPLAY

Floor Standing Bagel Bakery Display Case

Models: KM-FDC-B6, KM-FDC-B12, KM-FDC-B15




Please read these installation instructions carefully to ensure the appliance is installed correctly and operates safely.

For any service related issues, please contact us:

☎ 718-576-6342 ✉ support@koolmore.com

Stay informed with the latest information for your KoolMore appliance.

Scan the QR code below to access the most recent User Manual on our website, which is constantly being updated and improved.

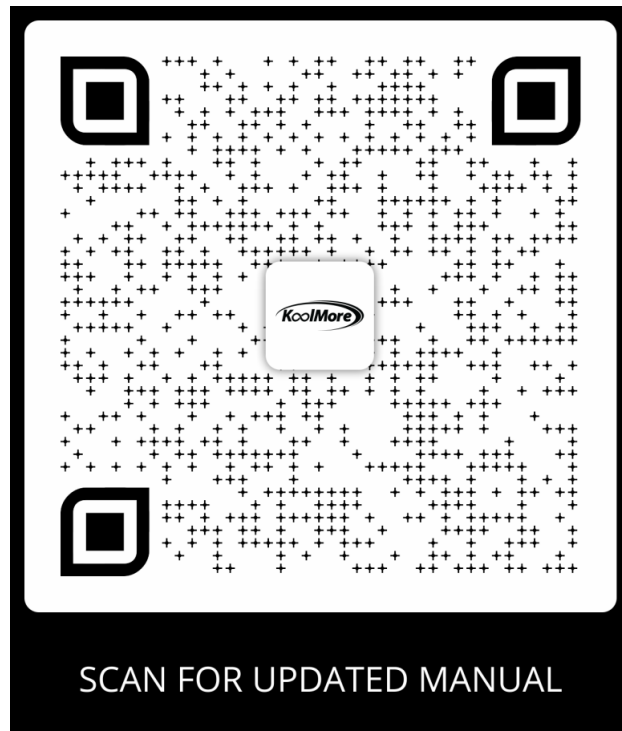

If you need any assistance or have questions, our customer support team is here to help.

Phone: 718-576-6342 Email: support@koolmore.com

Please write down the model number and serial number below for future reference. Both numbers are located on the rating label on the back of your unit or inside of the unit and are needed to obtain warranty service. You may also want to staple your receipt to this manual as it is your proof of purchase and may also be needed for service under warranty.

Model Number: _____

Serial Number: _____

Date of Purchase: _____

To better serve you, please do the following before contacting customer service:

If you received a damaged product, immediately contact the retailer or dealer that sold you the product.

Read and follow this User Manual carefully to help you install, use, and maintain your unit.

Refer to the Troubleshooting section of this manual as it will help you diagnose and solve many common issues.

Contents

Safety	4
Parts	5
Installation	6
Technical Parameters	7
Operation & Maintenance	8
Warranty	9

Safety

This manual provides important information on the installation, operation, and maintenance of your Bagel Bakery Display Case. Carefully read and follow all instructions to ensure safe and proper use.

General Safety Warnings

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning its safe use and understand the hazards involved.

Children aged 8 years and above may use this appliance if they have been given supervision or instruction and understand the hazards.

Children must not play with the appliance.

Children must not perform cleaning or user maintenance without supervision.

If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid hazard.

Do not use pressure water jets or abrasive cleaners on the appliance.

Do not modify or alter the appliance in any way without explicit approval from the manufacturer, as this may create hazards and void the warranty.

Operate the appliance only when it is in technically proper and safe condition.

Keep children away from the appliance at all times.

Preserve this manual for future reference. When transferring or selling the appliance, include the manual.

Any technical interventions, assembly, or maintenance must be performed by qualified service personnel only.



Disposal Instructions

Do not dispose of this electrical appliance as unsorted municipal waste. Use separate collection facilities. Contact your local government authority for information on available collection systems. Improper disposal in landfills or dumps can cause hazardous substances to leak into the groundwater and enter the food chain, harming health and the environment.

Parts



Installation

Installation Requirements

Stable Surface Placement

Place the unit on a flat, level, and stable surface capable of supporting its weight.

Accessible Power Connection

Position the unit so that the power plug remains easily accessible at all times. This allows the unit to be quickly disconnected if necessary.

Power Connection

Connect the unit to a properly grounded 110–120V outlet that complies with local electrical codes.

Dedicated Outlet Recommended

For safety and optimal performance, plug the unit directly into a wall outlet. Avoid using extension cords or overloaded power strips.

Power Cord Safety


Do not damage, bend, or place heavy objects on the power cord. If the cord becomes damaged, discontinue use immediately.

Moisture Protection

Do not expose the unit to excessive moisture. Do not spray or rinse the unit directly with water.

Technical Parameters

Parameter	KM-FDC-B6	KM-FDC-B12	KM-FDC-B15
Lamp power (W)	6	6	6
Rated Current (A)	0.1	0.1	0.1
Rated Voltage (V)	110-120~	110-120~	110-120~
Rated Frequency (Hz)	60	60	60
Number of Wire Baskets	6	12	15
Net Weight (lbs)	118	210.5	250.2
Overall Dimension (in)	31.38 × 22.01 × 50.00	59.57 × 22.01 × 50.00	73.66 × 22.01 × 50.00

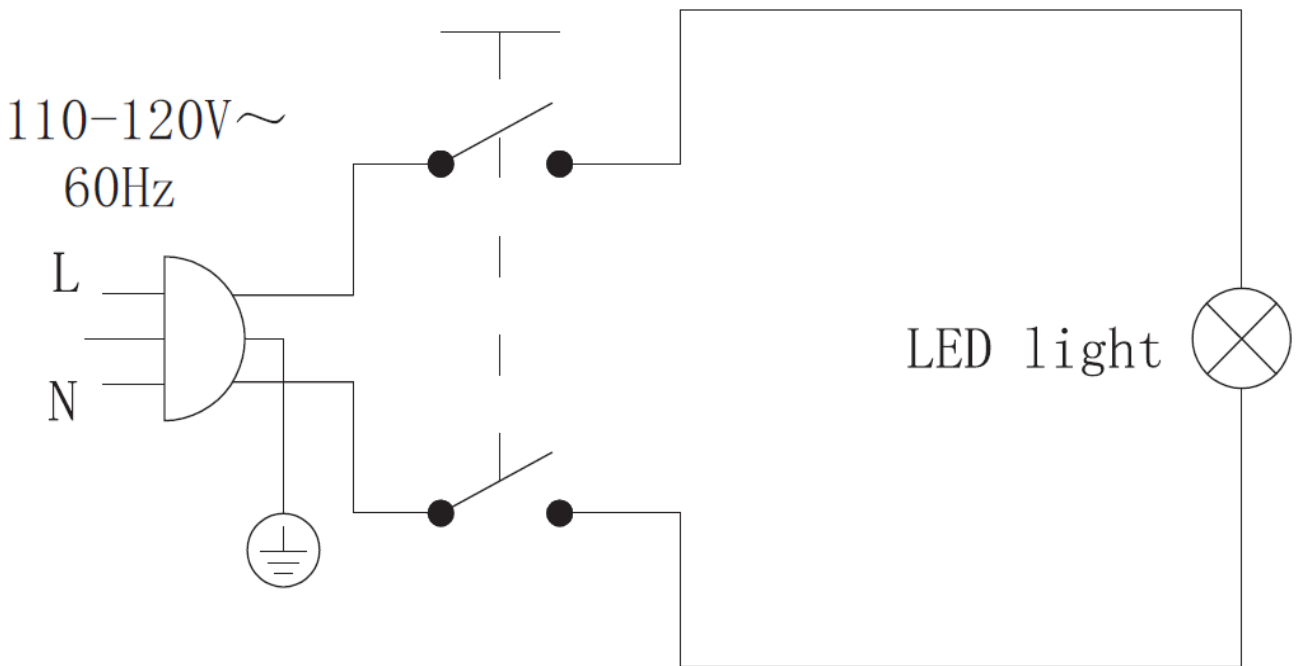

Note

- The electrical circuit diagram and specifications listed on the product nameplate are considered final in the event of any discrepancies or updates.
- Product design and specifications may be improved or modified without prior notice.
- For reference purposes only. Do not attempt to perform repairs on your own. Doing so will void the warranty.

Operation & Maintenance

Before First Use

Clean the interior surfaces and display shelves with a soft cloth and mild cleaning agent.

Dry all parts thoroughly before connecting to power.

Place the unit on a stable, level surface.

Connect the device to a properly grounded power outlet.

Operation

Turn on the interior LED light when needed using the light switch.

Disconnect the unit from the power outlet when not in use.

Cleaning

Always disconnect the unit from the power supply before cleaning.

Clean the interior and exterior regularly using a soft, damp cloth and mild detergent.

Do not use abrasive cleaners, scouring pads, or acidic cleaning agents.

Do not use pressure water jets.

Do not allow water to enter electrical components.

Never immerse the unit, power cord, or plug in water or other liquids.

After cleaning, dry all surfaces thoroughly with a soft cloth.

Ensure the unit is completely clean and dry before storing it.

Maintenance & Repairs

Regularly inspect the power cord to ensure it is not damaged.

Do not use the unit if the power cord is damaged.

If the power cord requires replacement, it must be replaced by the manufacturer, service agent, or a qualified technician.

All repairs and maintenance must be carried out by qualified personnel only.

The unit must always be disconnected from the power supply before maintenance or when replacing parts.

Safety Notice

Children should be supervised to ensure they do not play with the appliance.



WARRANTY

LIMITED WARRANTY

KoolMore Supply Inc. extends a limited warranty to the original purchaser, guaranteeing that this KoolMore product is free from manufacturing defects in material or workmanship for one year from the date of purchase.

Should you discover any such defect within the warranty period, KoolMore Supply Inc. reserves the right to repair or replace the product without charge, or to cover the cost of replacement parts and repair labor needed to correct defects present at the time of purchase or resulting from regular usage, when the appliance has been installed, operated, and maintained as per the instructions provided.

At its sole discretion, KoolMore Supply Inc. may decide to replace the product. In such an event, your replacement appliance will carry the warranty for the remaining term of the original unit's warranty period.

This warranty is valid exclusively to the original purchaser of the product and only applicable within the United States. The warranty commences from the date of original consumer purchase. Proof of the original purchase date will be required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy will be product repair, as outlined above. All services must be provided by a KoolMore designated service company.

KoolMore shall not be responsible or liable for any loss, spoilage, or damage to food, beverages, pharmaceuticals, medical supplies, or any other contents stored in the unit resulting from failure, malfunction, defects, improper installation, improper use, power interruption, or any other cause. Any such losses are expressly excluded from coverage under this warranty.

To claim warranty or request repair service:

Email support@koolmore.com. Please include your name, address, phone number, warranty repair request, and a copy of your proof of purchase receipt. Alternatively, visit koolmore.com and use the Contact Us page. A KoolMore customer service representative will promptly arrange service for your appliance.

We thank you for choosing KoolMore.

WARRANTY EXCLUSIONS

This limited warranty will not cover:

1. Failure of the product to perform during power failures or interruptions, or due to inadequate electrical service.
2. Damage incurred during transportation or handling.
3. Damage caused by accidents, vermin, lightning, winds, fire, floods, or acts of God.
4. Damage resulting from accidents, alterations, misuse, abuse, improper installation, repair, or maintenance. This includes using any external device that alters or converts the voltage or frequency of electricity.
5. Unauthorized product modifications, repairs by unauthorized centers, or use of non-approved replacement parts.
6. Abnormal cleaning and maintenance not aligned with the user's manual.
7. Use of incompatible accessories or components.
8. Any costs associated with repairs or replacements under these excluded circumstances shall be the responsibility of the consumer.

KoolMore