




Assembly Guide

Commercial Stainless Steel Liquor Display Rack

Models: KM-LD-2312, KM-LD-2318, KM-LD-2324, KM-LD-2336, KM-LD-2612, KM-LD-2618, KM-LD-2624, KM-LD-2636

Display Rack

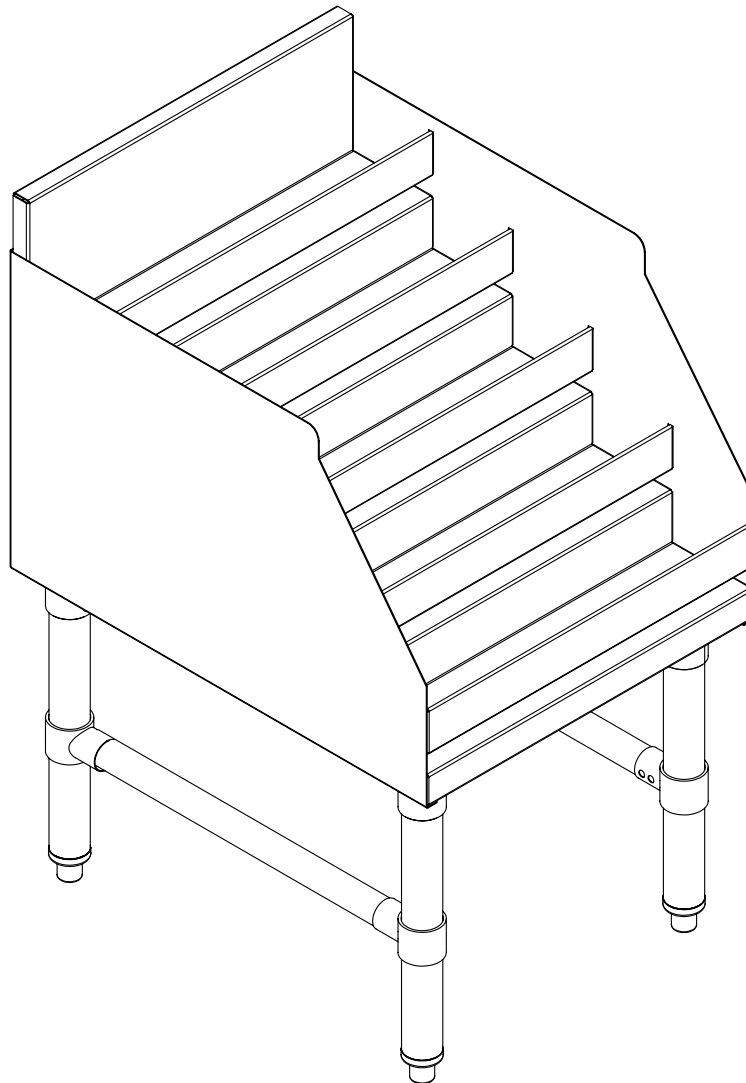


Before assembly and installation, please read this guide carefully to ensure proper setup and safe operation.

For any service related issues, please contact us:

☎ 718-576-6342 ✉ support@koolmore.com

Stay informed with the latest information for your KoolMore appliance.

Scan the QR code below to access the most up-to-date user manual on our website.

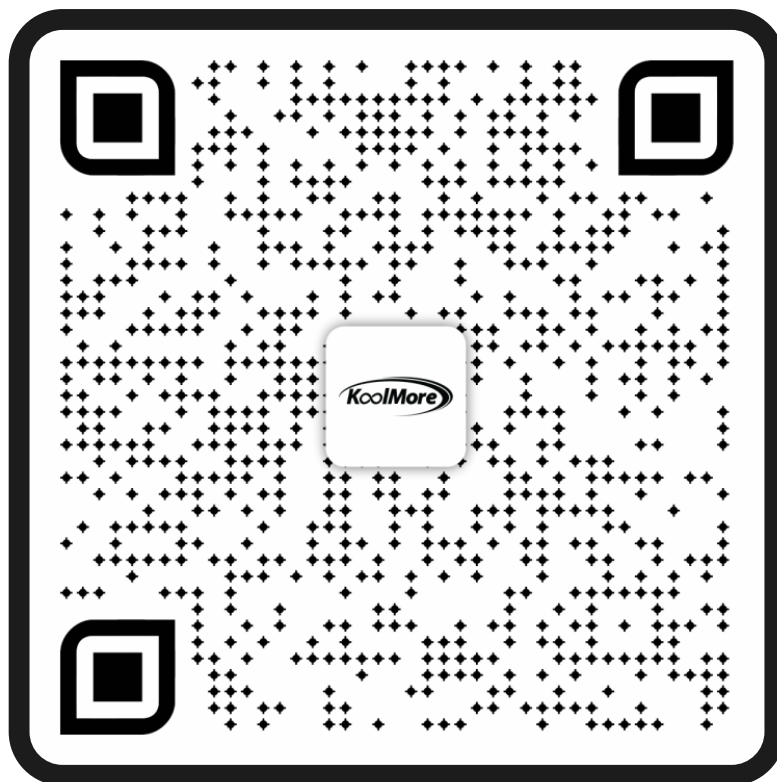

**If you need any assistance or have questions, our customer support
team is here to help.**

Phone: 718-576-6342 Email: support@koolmore.com

Please write down the model number and serial number below for future reference. Both numbers are located on the rating label on the back of your unit or inside of the unit and are needed to obtain warranty service. You may also want to staple your receipt to this manual as it is your proof of purchase and may also be needed for service under warranty.

Model Number: _____



Serial Number: _____

Date of Purchase: _____



To better serve you, please do the following before contacting customer service:

If you received a damaged product, immediately contact the retailer or dealer that sold you the product.
Read and follow this Assembly Guide carefully to help you install, use, and maintain your unit.

Installation

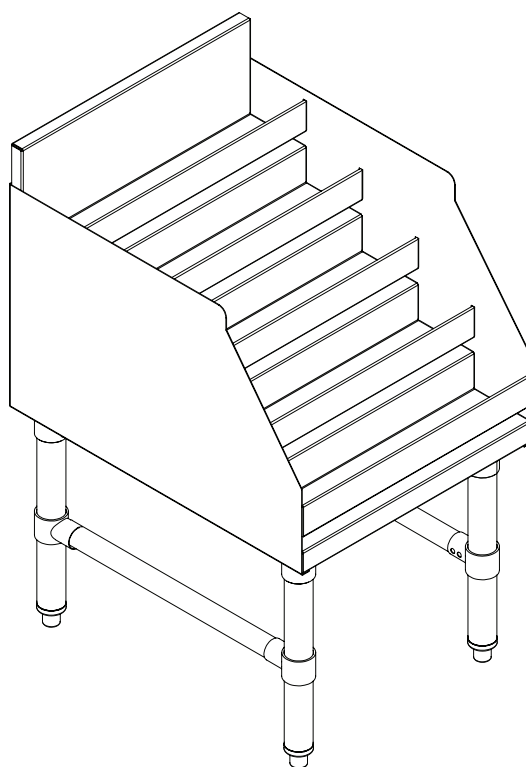
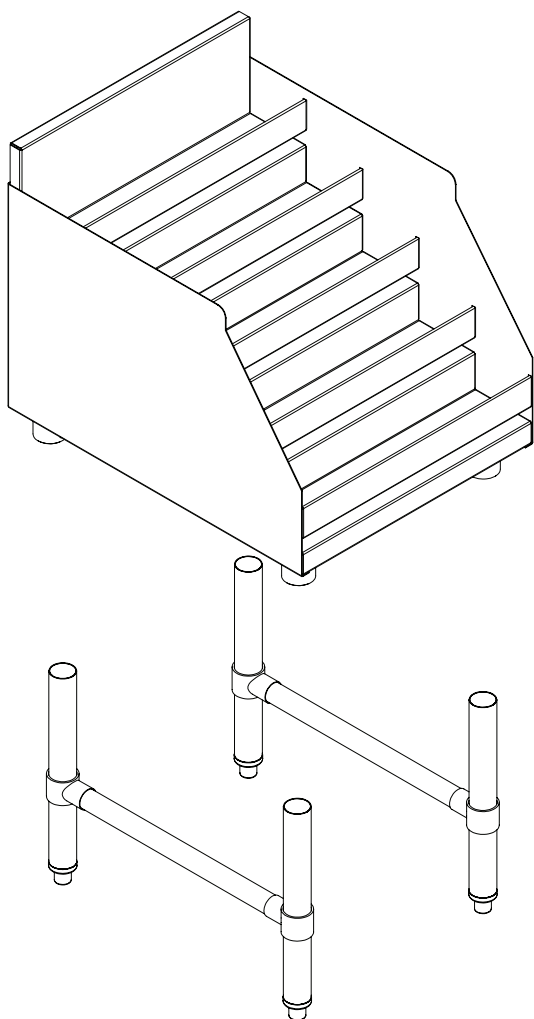


Parts			
Number	Pattern	Part Name	Quantity
①		Display Rack	1
②		Leg	4
③		Leg Brace	2
④		Leg Brace Connector	4

  Accessroies			
Number	Pattern	Part Name	Quantity
①		M8×1×10 mm Screws	9
②		S4 Screw Wrench	1




1

Insert the leg braces into the leg brace connectors and secure them with screws. Insert the legs into the connectors at the same height, then tighten the screws to complete the H-frame assembly.

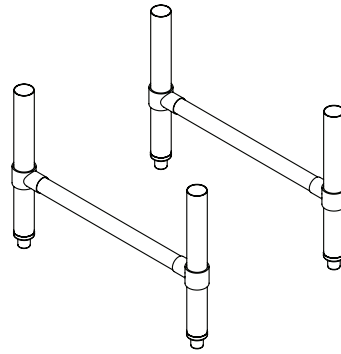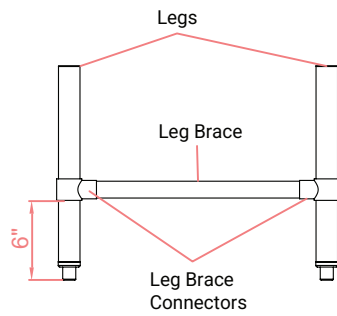

2

Place the top display section on its back on a flat surface. Insert the H-frame legs into the sockets underneath the top section and secure them using M8 × 1.0 × 10 mm screws. Tighten all screws securely.

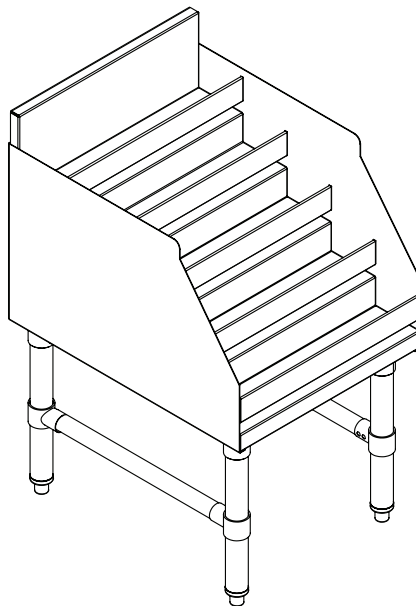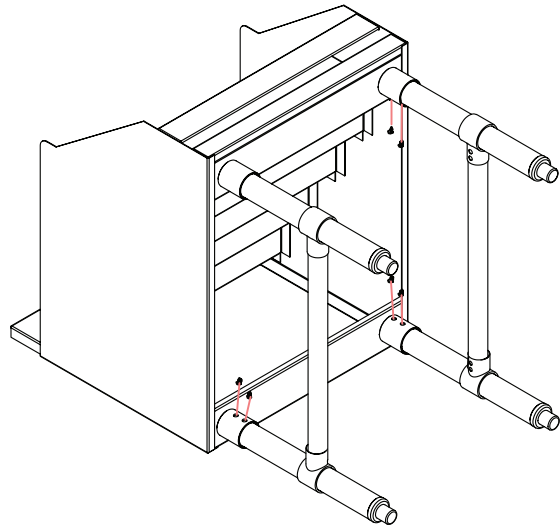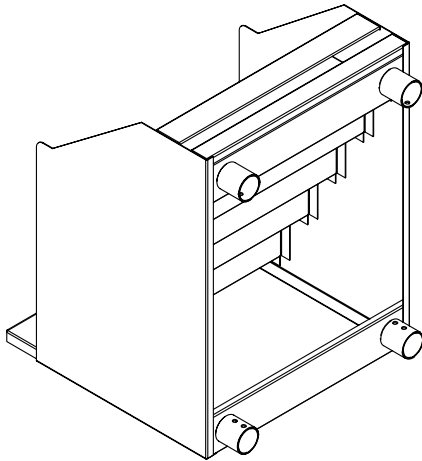



WARRANTY

LIMITED WARRANTY

KoolMore Supply Inc. extends a limited warranty to the original purchaser, guaranteeing that this KoolMore product is free from manufacturing defects in material or workmanship for one year from the date of purchase.

Should you discover any such defect within the warranty period, KoolMore Supply Inc. reserves the right to repair or replace the product without charge, or to cover the cost of replacement parts and repair labor needed to correct defects present at the time of purchase or resulting from regular usage, when the appliance has been installed, operated, and maintained as per the instructions provided.

At its sole discretion, KoolMore Supply Inc. may decide to replace the product. In such an event, your replacement appliance will carry the warranty for the remaining term of the original unit's warranty period.

This warranty is valid exclusively to the original purchaser of the product and only applicable within the United States. The warranty commences from the date of original consumer purchase. Proof of the original purchase date will be required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy will be product repair, as outlined above. All services must be provided by a KoolMore designated service company.

KoolMore shall not be responsible or liable for any loss, spoilage, or damage to food, beverages, pharmaceuticals, medical supplies, or any other contents stored in the unit resulting from failure, malfunction, defects, improper installation, improper use, power interruption, or any other cause. Any such losses are expressly excluded from coverage under this warranty.

To claim warranty or request repair service:

Email support@koolmore.com. Please include your name, address, phone number, warranty repair request, and a copy of your proof of purchase receipt. Alternatively, visit koolmore.com and use the Contact Us page. A KoolMore customer service representative will promptly arrange service for your appliance.

We thank you for choosing KoolMore.

WARRANTY EXCLUSIONS

This limited warranty will not cover:

1. Failure of the product to perform during power failures or interruptions, or due to inadequate electrical service.
2. Damage incurred during transportation or handling.
3. Damage caused by accidents, vermin, lightning, winds, fire, floods, or acts of God.
4. Damage resulting from accidents, alterations, misuse, abuse, improper installation, repair, or maintenance. This includes using any external device that alters or converts the voltage or frequency of electricity.
5. Unauthorized product modifications, repairs by unauthorized centers, or use of non-approved replacement parts.
6. Abnormal cleaning and maintenance not aligned with the user's manual.
7. Use of incompatible accessories or components.
8. Any costs associated with repairs or replacements under these excluded circumstances shall be the responsibility of the consumer.

