




USER MANUAL

CONVERTIBLE REFRIGERATOR/ FREEZER

KoolMore Convertible Refrigerator/ Freezer

Model: KM-RUF-42C

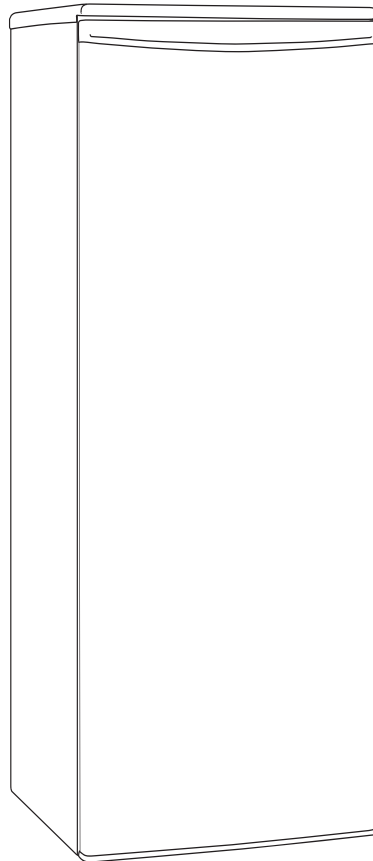

Before using, please read the operating instructions carefully to ensure proper application and achieve satisfactory results.

For any service-related issues, please contact us:



718-576-6342



support@koolmore.com

***Stay informed with the latest information
for your KoolMore Appliance.***

**If you need any assistance or have questions, our customer
support team is here to help.**

SAFETY

Electrical Safety

- **Grounding Requirement:** To reduce the risk of electrical shock in case of a short circuit, ensure the appliance is properly grounded. An escape wire should be present for electrical current.

Child Safety Precaution

Caution - Hazardous Attraction: To prevent children from being entrapped, remove the door or lid from an unutilized freezer. Confirm it's been rendered safe.

Risk of Entrapment: If disposing of a freezer:

- Detach the doors completely.
- Keep shelving units intact to prevent easy access for children.

Immediate Action Advised!

Fire and Explosion Risk

Warning - Potential for Explosion: Do not puncture refrigerant tubing. Avoid using sharp objects during defrosting.

Preventive Measures:

- Store flammable materials like gasoline away from the freezer.
- Clean with non-flammable agents only.

Proper Disposal: Follow federal and local laws when disposing of the freezer.

Maintenance and Service

Component Replacement: Use identical components for replacement. Factory-authorized service personnel should perform services to avoid ignition risks from incorrect parts or improper servicing.

Grounding Instructions

- **Proper Connection:** Your appliance should have a power cord with a grounding wire and plug. Connect it to a grounded outlet.

Warning - Electrical Shock Hazard:

Misuse of the grounding plug can lead to electric shock. Consult with a qualified electrician if the grounding instructions are not understood or if there is doubt about the appliance being properly grounded.

Extension Cords: Avoid using an extension cord. The freezer should have a dedicated 115V electrical outlet. Do not connect other appliances in the same outlet. Splicing the cord is prohibited.

KEEP THESE GUIDELINES FOR FUTURE REFERENCE

Installation/Operation

Setup Process

Unpack and Clean: Remove all packaging materials. Clean the exterior with a soft, damp cloth and the interior with a lukewarm, damp cloth.

Placement:

Position on a stable, level floor.


Ensure a 5-inch clearance between the appliance's back and any surface.

Keep away from direct sunlight and heat to prevent damage and increased energy use.

Maintain dry surroundings to minimize defrosting frequency.

Operating the Appliance

Dual Function: Can be used as either a refrigerator or a freezer, controlled by the thermostat dial inside.

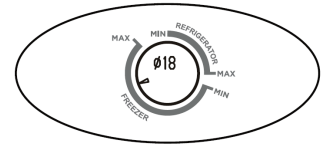

As Refrigerator:

Set the dial to "REFRIGERATOR" to store fresh food and beverages.

Interior temperature ranges from 0 - 10°C (32 - 50°F).

Prevent food from contacting cooling lines.

As Freezer:

Set the dial to "FREEZER" for frozen goods.

Interior temperature ranges from -12 - -24°C (10.4 - -11.2°F).

Avoid sealing liquids in containers to prevent breakage.



Defrosting Procedures

- When to Defrost: Once frost reaches a thickness of about 1/4".
- Frequency: Annually, or more often in high humidity.

Do Not: Use sharp objects to remove frost.

Defrosting Steps:

1. Turn appliance off and remove food.
2. Store food in a cool place.
3. Collect melted ice.
4. Wipe down the interior.
5. Clean and dry walls.
6. Restore appliance to operation.
7. Refill with food items.

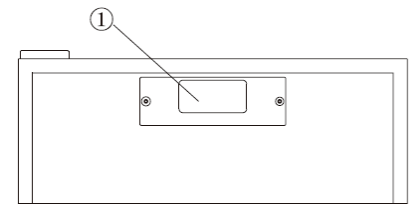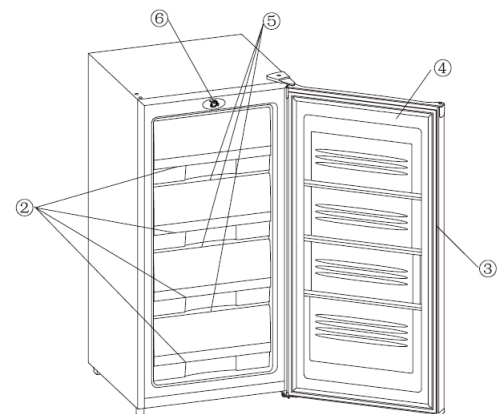

Freezer Features

1. Thermostat Dial: Regulate the freezer's internal temperature. Located on the back.
2. Magnetic Gasket: Ensures a secure door seal, maintaining internal temperatures and efficiency.
3. Door: Access to the freezer's interior.
4. Refrigerated Shelves: For organized storage of frozen goods.
5. Thermostat Knob: A tool for precise temperature adjustments.

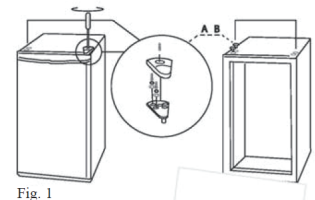


Fig. 1

Door Reversal Process

Caution: To prevent injury or damage during the door reversal process, assistance is recommended.

Changing Door Swing Direction:

If the current door opening direction is impractical, you can alter it using the following steps illustrated in the diagrams provided.

Please refer to the included diagrams for a detailed door reversal procedure.



Fig. 2

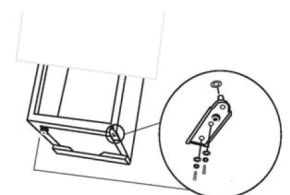


Fig. 3

MAINTENANCE

Cleaning Procedure

Interior: Clean with a soft cloth and a solution of one tablespoon baking soda to one quart of water. For glass shelves, use a mild detergent solution. Wipe dry with a soft cloth.

Exterior: Wipe with a soft, damp cloth and a mild detergent or appliance cleaner.

Precautions During Absences

Short Vacations:

- Keep the control knob on the usual setting.

Extended Vacations:

1. Remove all food.
2. Unplug from the electrical outlet.
3. Clean thoroughly, including the drip tray.
4. Leave the door open to prevent condensation, mold, or odors.

In Case of Power Failure

- Most issues resolve in a few hours without affecting freezer temperature.
- Limit door openings when the power is out.
- For long outages, take additional measures to safeguard your food.

Preparing for Relocation

- Secure or remove all items within the freezer.
- Protect the leveling legs by ensuring all items are stowed properly.

Essential Usage Guidelines

- Avoid placing hot food directly in the freezer.
- Do not store spoiled items.
- Never overload the cabinet.
- Limit door openings to necessary instances only.
- For extended non-use, clean and leave the door ajar to maintain air circulation and prevent mold and odor buildup.

Please adhere to these guidelines to ensure proper function and longevity of your freezer.

TROUBLESHOOTING

Occasionally, a minor problem may arise, and a service call may not be necessary- use this troubleshooting guide for a possible solution.

Problem	Possible Cause	Suggested Solution
1) Freezer does not work	- No power to unit.	- Check connection of power cord to power source.
	- Power cord is unplugged.	- Plug in unit.
	- Wrong voltage is being used.	- Use proper voltage.
2) Freezer runs continuously	- Temperature is set too low.	- Set temperature control to warmer setting.
	- Door is not closed.	- Close door securely.
	- Hot food inserted into cabinet.	- Be sure food has cooled to room temperature
	- Door opened too long or too often.	before inserting.
	- Close proximity to heat source or	- Minimize door openings and duration.
	direct sunlight.	- Do not place unit close to heat sources or
		direct sunlight.
3) Internal temperature not cold enough	- No power to unit.	- Check connection of power cord to power source.
	- Power cord is unplugged.	- Plug in unit.
	- Temperature is set too high.	- Check setting and increase as needed.
	- Door is not closed.	- Close door securely.
	- Hot food inserted.	- Be sure food has cooled to room temperature
	- Door opened too long/often.	before inserting.
	- Air flow obstruction.	- Minimize door openings and duration.
	- Wrong voltage is being used.	- Allow room for air to circulate around the unit.
	- Close proximity to heat source or	- Use proper voltage.
	direct sunlight.	- Do not place unit close to heat sources or
		direct sunlight.



WARRANTY

LIMITED WARRANTY

Koolmore Supply, Inc. extends a limited warranty to the original purchaser, guaranteeing that this Koolmore product is free from manufacturing defects in material or workmanship for one year from the date of purchase.

Should you discover any such defect within the warranty period, Koolmore Supply, Inc., reserves the right to repair or replace the product without charge, or to cover the cost of replacement parts and repair labor needed

to correct defects present at the time of purchase or resulting from regular usage, when the appliance has been

installed, operated, and maintained as per the instructions provided.

At its sole discretion, Koolmore Supply Inc. may decide to replace the product. In such an event, your replacement

appliance will carry the warranty for the remaining term of the original unit's warranty period.

This warranty is valid exclusively to the original purchaser of the product and only applicable within the United

States. The warranty commences from the date of original consumer purchase. Proof of the original purchase date will be required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy will be product repair, as outlined above. All services must be provided by a Koolmore-designated service company.

To claim warranty or request repair service:

Email support@koolmore.com. Please include your name, address, phone number, warranty repair request,

and a copy of your proof of purchase receipt. Alternatively, visit koolmore.com and use the contact us page. A

Koolmore customer service representative will promptly arrange service for your appliance.

We thank you for choosing Koolmore.

WARRANTY EXCLUSIONS

This limited warranty will not cover:

1. Failure of the product to perform during power failures or interruptions, or due to inadequate electrical service.
2. Damage incurred during transportation or handling.
3. Damage caused by accidents, vermin, lightning, winds, fire, floods, or acts of God.
4. Damage resulting from accidents, alterations, misuse, abuse, improper installation, repair, or maintenance.

This includes using any external device that alters or converts the voltage or frequency of electricity.

5. Unauthorized product modifications, repairs by unauthorized centers, or use of non-approved replacement parts.

6. Abnormal cleaning and maintenance not aligned with the user's manual.

7. Use of incompatible accessories or components.

8. Any costs associated with repairs or replacements under these excluded circumstances shall be the responsibility of the consumer.

