




Installation Manual


WALL MOUNT CABINET

Stainless-Steel Commercial Wall Cabinets

Models: KM-WMC-1524-S, KM-WMC-1530-S, KM-WMC-1536-S, KM-WMC-1548-S, KM-WMC-1560-S, KM-WMC-1524-L, KM-WMC-1530-L, KM-WMC-1536-L

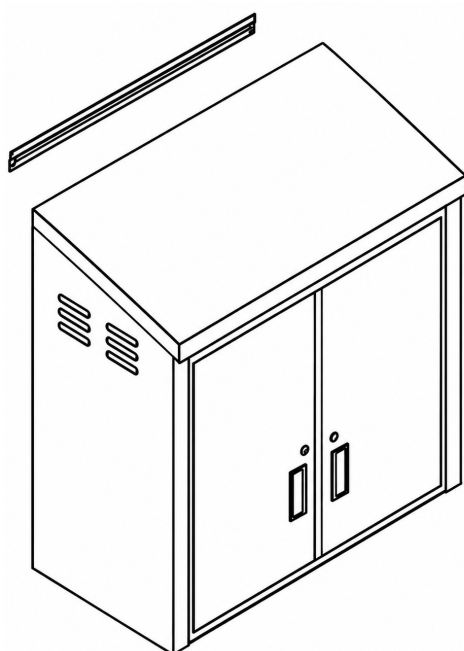

KM-WMC-1524-S

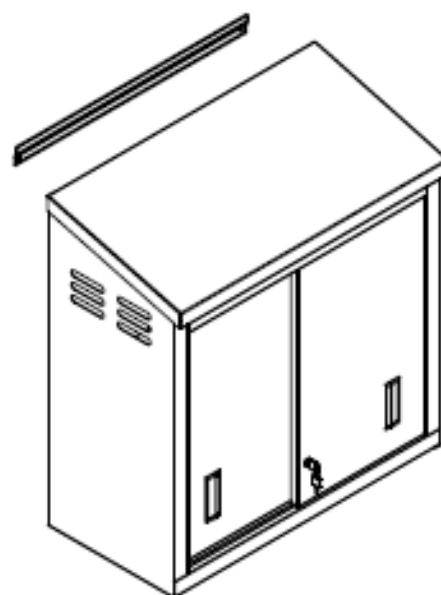

KM-WMC-1530-L


Before installation, please read this guide carefully to ensure proper setup and safe operation.

For any service related issues, please contact us:

☎ 718-576-6342 ✉ support@koolmore.com

Stay informed with the latest information for your KoolMore appliance.

Scan the QR code below to access the most up-to-date user manual.

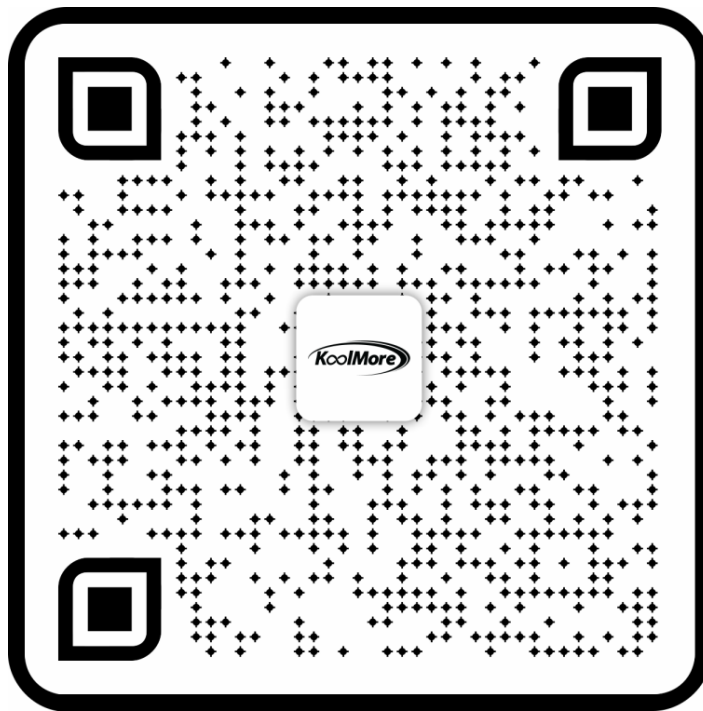

**If you need any assistance or have questions, our customer support
team is here to help.**

Phone: 718-576-6342 Email: support@koolmore.com

Please write down the model number and serial number below for future reference. Both numbers are located on the rating label on the back of your unit or inside of the unit and are needed to obtain warranty service. You may also want to staple your receipt to this manual as it is your proof of purchase and may also be needed for service under warranty.

Model Number: _____
Serial Number: _____
Date of Purchase: _____

To better serve you, please do the following before contacting customer service:


If you received a damaged product, immediately contact the retailer or dealer that sold you the product.

Read and follow this Installation Manual carefully to help you install, use, and maintain your unit.


Refer to the Troubleshooting section of this manual as it will help you diagnose and solve many common issues.

Installation


Slope Top Wall Cabinet Assembly Instructions

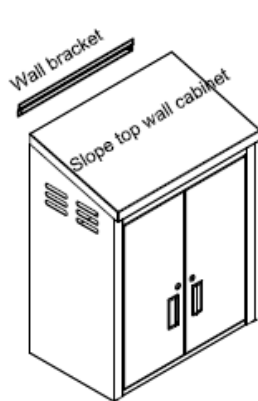


MODEL:KM-WMC-1524-S

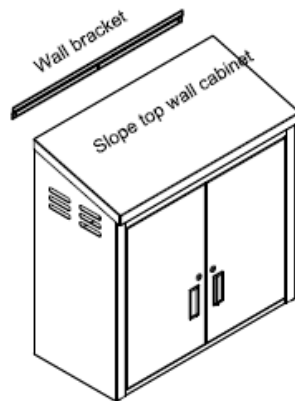


MODEL:KM-WMC-1530-S

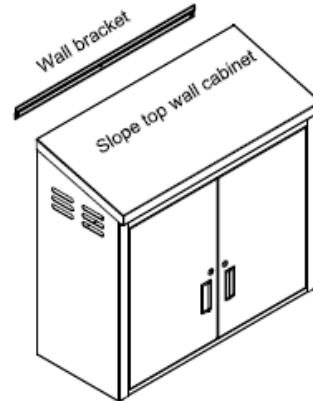


MODEL:KM-WMC-1536-S

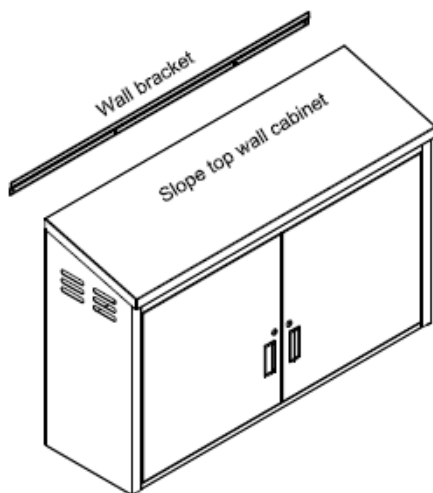


MODEL:KM-WMC-1548-S

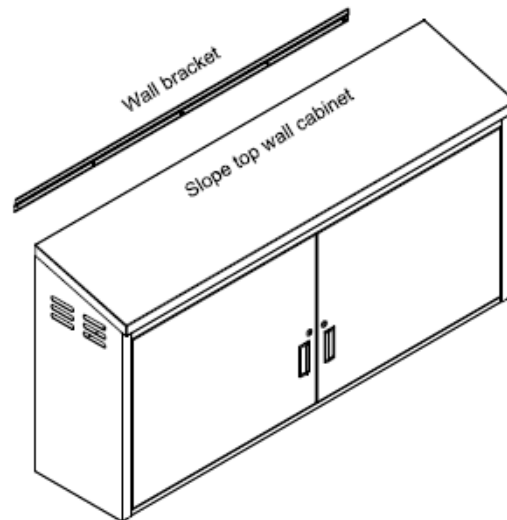


MODEL:KM-WMC-1560-S

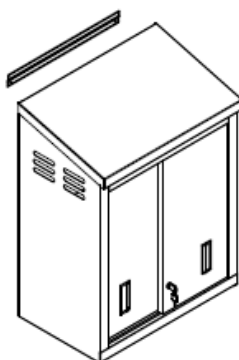


MODEL:KM-WMC-1524-L

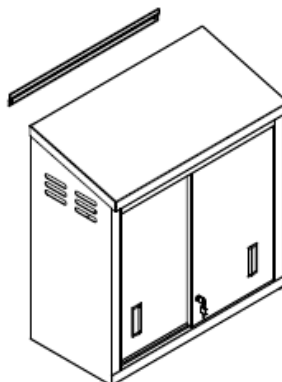


MODEL:KM-WMC-1530-L

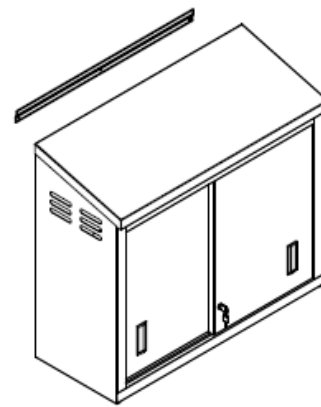



MODEL:KM-WMC-1536-L

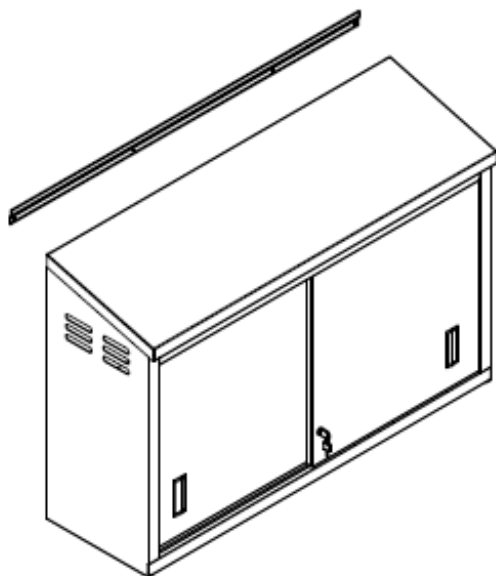

MODEL:KM-WMC-1548-L

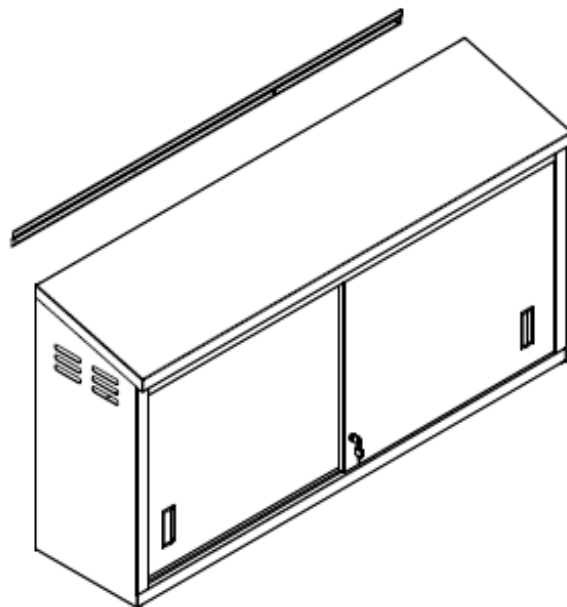



MODEL:KM-WMC-1560-L

 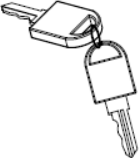Accessories			
No.	Diagram	Part Name	Quantity
1		Wall Bracket	1
2		Wall Anchor	KM-WMC-1524-S/L – 5 KM-WMC-1530-S/L – 7 KM-WMC-1536-S/L – 7 KM-WMC-1548-S/L – 9 KM-WMC-1560-S/L – 11
3		Screw	KM-WMC-1524-S/L – 5 KM-WMC-1530-S/L – 7 KM-WMC-1536-S/L – 7 KM-WMC-1548-S/L – 9 KM-WMC-1560-S/L – 11
4		Key	2 Sets For Hinged Doors 1 Set For Sliding Doors

Installing the Wall Mount Cabinet

Before Installation

- Verify that the wall can safely support the weight of the cabinet and its contents.
- Use appropriate mounting hardware for your wall type.
- Installation should be performed by at least two people when possible.

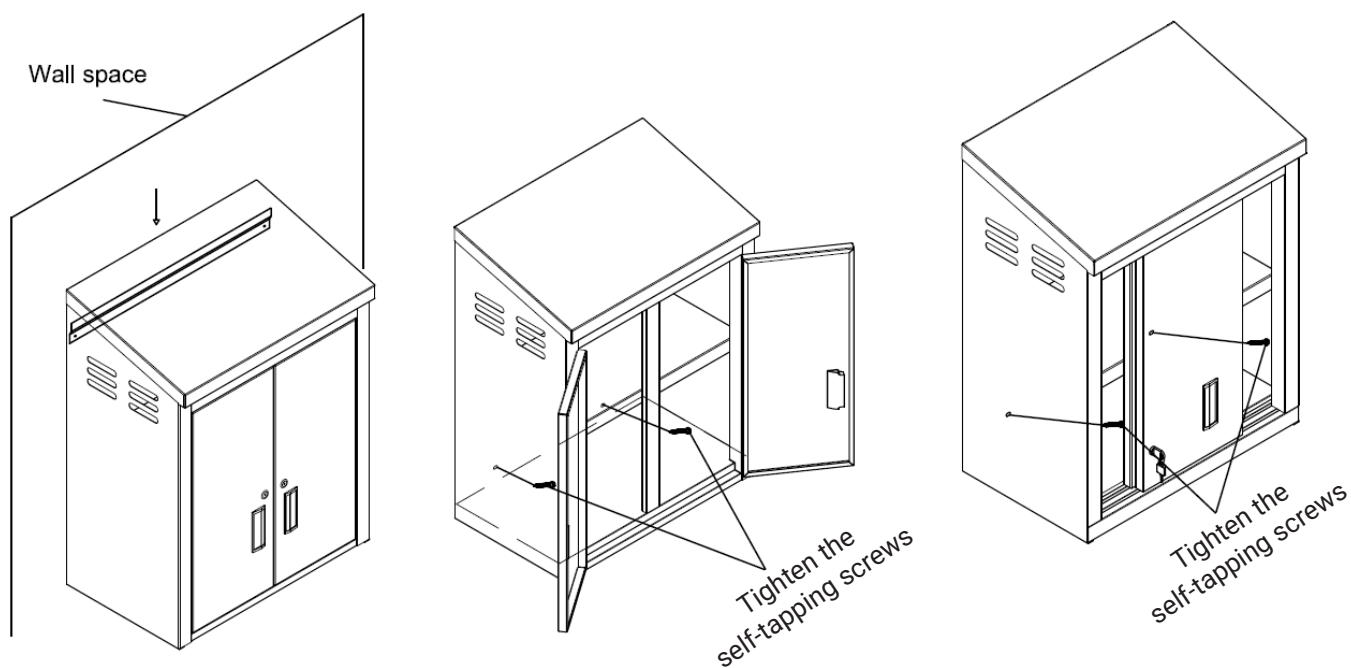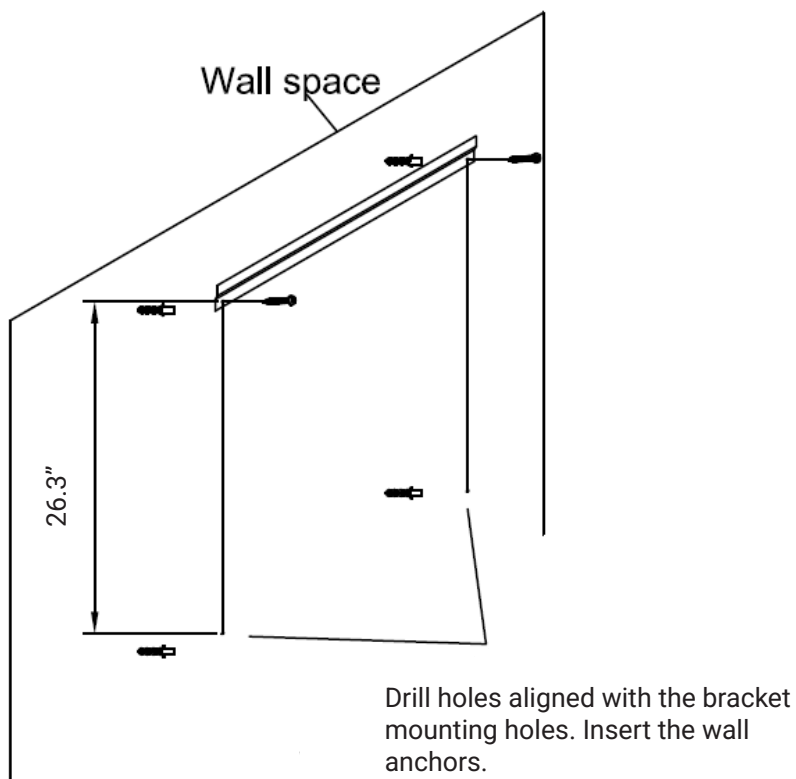

Installation Steps

1. Mark the Mounting Location

Position the wall mounting bracket at the desired installation location. Use a level to ensure the bracket is straight. Mark the mounting hole locations on the wall.

2. Drill Mounting Holes

Drill holes at the marked locations using an appropriate drill bit. Insert the supplied wall anchors if mounting into drywall or masonry.

3. Install the Wall Bracket

Secure the wall bracket to the wall using the provided screws. Make sure all screws are tightened securely.

4. Mark Lower Fastening Holes

Using the cabinet as a guide, mark the lower mounting hole locations. The lower holes should align vertically with the upper bracket holes. The recommended vertical spacing is **26.3 in.**

5. Install Lower Anchors

Drill the lower holes and insert the wall anchors.

6. Hang the Cabinet

Carefully lift the cabinet and hang it onto the wall bracket.

7. Secure the Cabinet

Open the cabinet doors and install the lower mounting screws through the interior mounting holes. Tighten all screws securely.

Important Notes

- Confirm the cabinet is level before fully tightening the hardware.
- Do not overload the cabinet beyond its rated capacity.
- Periodically inspect mounting hardware to ensure it remains secure.



WARRANTY

LIMITED WARRANTY

KoolMore Supply Inc. extends a limited warranty to the original purchaser, guaranteeing that this KoolMore product is free from manufacturing defects in material or workmanship for one year from the date of purchase.

Should you discover any such defect within the warranty period, KoolMore Supply Inc. reserves the right to repair or replace the product without charge, or to cover the cost of replacement parts and repair labor needed to correct defects present at the time of purchase or resulting from regular usage, when the appliance has been installed, operated, and maintained as per the instructions provided.

At its sole discretion, KoolMore Supply Inc. may decide to replace the product. In such an event, your replacement appliance will carry the warranty for the remaining term of the original unit's warranty period.

This warranty is valid exclusively to the original purchaser of the product and only applicable within the United States. The warranty commences from the date of original consumer purchase. Proof of the original purchase date will be required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy will be product repair, as outlined above. All services must be provided by a KoolMore designated service company.

KoolMore shall not be responsible or liable for any loss, spoilage, or damage to food, beverages, pharmaceuticals, medical supplies, or any other contents stored in the unit resulting from failure, malfunction, defects, improper installation, improper use, power interruption, or any other cause. Any such losses are expressly excluded from coverage under this warranty.

To claim warranty or request repair service:

Email support@koolmore.com. Please include your name, address, phone number, warranty repair request, and a copy of your proof of purchase receipt. Alternatively, visit koolmore.com and use the Contact Us page. A KoolMore customer service representative will promptly arrange service for your appliance.

We thank you for choosing KoolMore.

WARRANTY EXCLUSIONS

This limited warranty will not cover:

1. Failure of the product to perform during power failures or interruptions, or due to inadequate electrical service.
2. Damage incurred during transportation or handling.
3. Damage caused by accidents, vermin, lightning, winds, fire, floods, or acts of God.
4. Damage resulting from accidents, alterations, misuse, abuse, improper installation, repair, or maintenance. This includes using any external device that alters or converts the voltage or frequency of electricity.
5. Unauthorized product modifications, repairs by unauthorized centers, or use of non-approved replacement parts.
6. Abnormal cleaning and maintenance not aligned with the user's manual.
7. Use of incompatible accessories or components.
8. Any costs associated with repairs or replacements under these excluded circumstances shall be the responsibility of the consumer.

