




# INSTALLATION MANUAL

## Aluminum Swinging Traffic Door

**Models:** *KM-SWD30, KM-SWD36*


---

Step 1: Insert six large cross-head bolts (1/4-20\*1") to mount the top. Ensure the cam is flush.


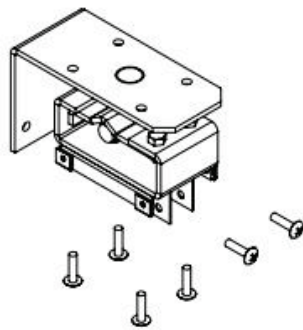


Step 2: Mount the L-Bracket hinge. Insert two 1/4-20-1" screws, and attach it to the left side.

Step 3: Insert two 3/8-16\*1" screws, then screw and tighten them to the bottom.

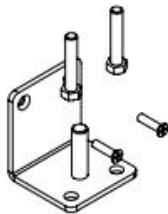

Step 4: Mount two plastic caps. Insert and screw four #10-32\*0.375 cross sink heads, then tighten.

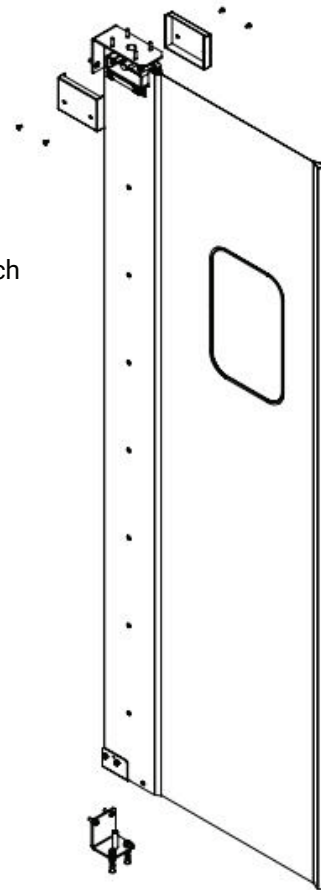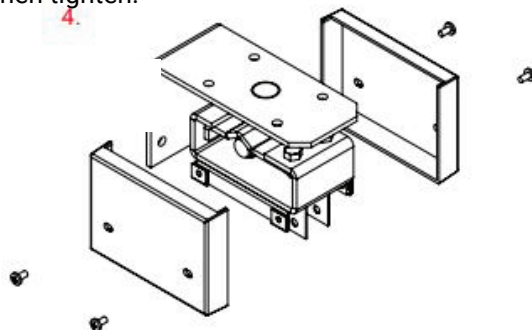

For any service-related issues, please contact us:



718-576-6342



support@koolmore.com